



Installation Instructions

Tools Needed



Flat
Screwdriver



Scissors



Pen

Parts



Arm Wrap

Velcro



Strap



Rubber
sleeve



Tri-glide
Buckle



Clamp

1



The Snug Lug is installed on either side of the middle hand hold.


Which side you choose depends on which arm you prefer to carry the seat with and if you prefer to carry it facing forwards or backwards. The best method varies based on the design of each seat. You can install and experiment until you find what works for you.

2




This user is carrying with his right arm and the seat facing forwards. The wrap is installed on the farthest side of the middle hand hold from the user.

3

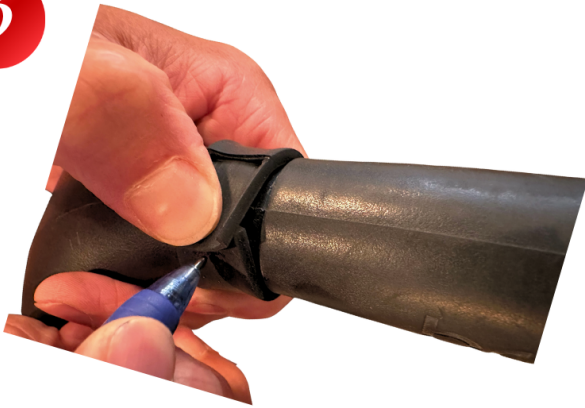

Wrap the rubber sleeve around the handle at the location in step 1. Mark where they overlap on the end of the rubber piece that doesn't have a cut out on the top

4

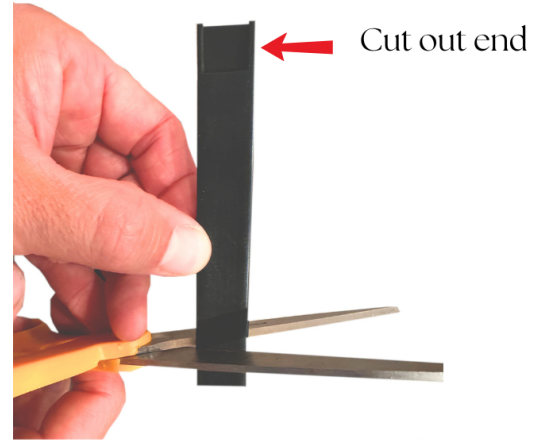

Cut the rubber sleeve at your mark

5



Slide the rubber sleeve all the way onto the clamp with the cut out end first

TIP: Straighten the band to install the rubber sleeve. Once installed, squeeze the clamp and bend the band into a tight circle again

6



Lay the strap on top of the handle. Place the clamp over the strap. The clamp goes next to the middle hand hold at the location from step 1.

7



Leave a 1/2" gap between edge of the clamp and the oval loop

8



Squeeze the clamp together with your fingers while tightening the screw. Keep the clamp centered on the top of the handle while you tighten.

TIGHTEN SECURELY!

9



Pull the strap up through the oval loop

10



The top view should look like this. The oval loop should fit over the top of the clamp

11



Pull the strap through the slide buckle.
Up one side and back down on the
other

12



Take the arm wrap (logo facing up) and pull
the strap up through the oval loop on the
arm wrap. Then slide the strap up through
the slide buckle and back down the other
side.

13



The top view should look like this

14

Now you can test the wrap to find the best hold.

(Do NOT test with a baby inside!)

Stand on the side of the seat that is farthest from the clamp.
Slide your arm through the wrap then reach down and grab
onto the outside of the seat.

Mix and match all of these options until you find the best position

- Adjust the slide buckle to shorten or lengthen the strap
- Turn the seat around and use the opposite arm
- Try carrying option A and B

TIP: Carrying option B works best with a shorter strap



Option A (outside of handle)



Option B (thru the handle)

15



Once you have determined your favorite hold, attach the included velcro piece onto the back side of the wrap. Remove the backing paper to expose the adhesive side of the velcro strip.

16



Lay the wrap down across the top of the handle keeping it snug.

TIP: Clean the handle where the velcro will contact with a degreaser before attaching to handle

17



Stick the velcro around the handle and trim off the excess

Congratulations!

You have successfully installed the Snug Lug! Now go enjoy the most comfortable car seat carry you'll ever have!

Don't forget to tag us in your social media posts!